



Ref.: GW03 24 04 01

Manual de instrucciones
Instruction manual

DISPENSADOR DE PAPEL DE TOALLA INOX AUTOMÁTICO
PAPER TOWEL STAINLESS STEEL DISPENSER, AUTOMATIC

GENWEC®




Gracias por adquirir este dispensador automático de papel. Hecho de acero inoxidable 304 con acabado satinado, manejado por una placa inteligente y sensor infrarrojos. Es robusto, sensitivo y ahorra energía. Es una elección idónea para sitios públicos.

CARACTERÍSTICAS

- Con una carcasa de acero inoxidable es robusto, estable y fácil de limpiar.
- Con un sensor infrarrojo permite dispensar el papel automáticamente.
- El no utilizar las manos evita la contaminación cruzada.
- 1 segundo entre cada dispensación, evitando gastar papel extra.
- Longitud ajustable con 200mm, 250mm, y 300mm.
- Acepta papel con anchos entre 195-200mm y diámetro de 200mm.
- Recargar el nuevo rollo automáticamente cuando se acaba el viejo. Esto evita gastar un rollo sin ser finalizado y que falte papel.

COMPONENTES

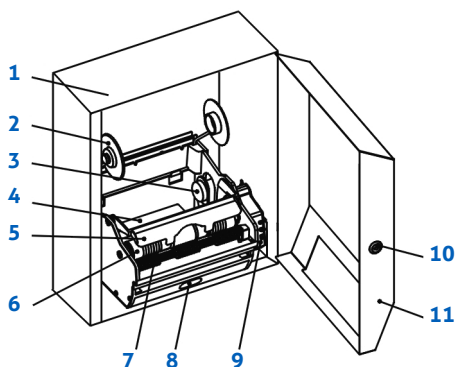

1. Base
2. Parte superior soporte papel
3. Parte inferior soporte papel
4. Tapa de baterías
5. Barra de transferencia
6. Rueda de goma
7. Rueda pequeña
8. Sensor
9. Interruptor
10. Carcasa
11. Cierre

MONTAJE

Abra la tapa frontal con la llave, taladre 4 agujeros de 6 mm. de diámetro como se muestra en la Figura 2 y fije el dispensador a la pared con la tornillería y tacos incluidos.

Nota: No instale el dosificador en un sitio que tenga luz directa o encima de algún elemento que haga reflejo.

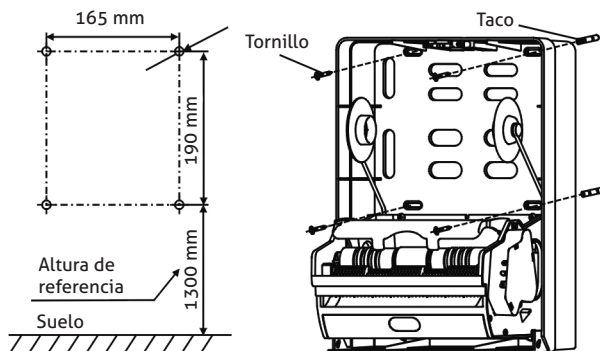


Figura 2

INSTALACIÓN DE PILAS

1. Abra la tapa del compartimento de baterías, y ponga 4 x LR20 pilas siguiendo los símbolos "+" "-", y vuelva a poner la tapa del compartimento.
2. Si hay un rollo de papel en el dispensador, este debe quitarse antes de instalar las pilas.

Alimentación DC (no incluido)

El dispensador tiene un sistema que selecciona automáticamente la forma de alimentación. Si el transformador DC está enchufado, las baterías no funcionan. Si el transformador deja de funcionar, las pilas automáticamente empezarían a funcionar.

Revise que el transformador DC está correctamente conectado (ver Figura3)

Notas:

1. *El dispensador no funcionará si se instalan las pilas incorrectamente.*
2. *Para evitar una rotura del dispensador, no mezcle diferentes tipos de pilas.*
3. *Cuando el dispensador está en batería baja, la luz del indicador parpadeará 1 vez por segundo. El dispensador puede seguir funcionando, pero debe reemplazar las pilas. Cuando parpadee 2 veces por segundo dejará de funcionar, debiendo reemplazar las pilas.*


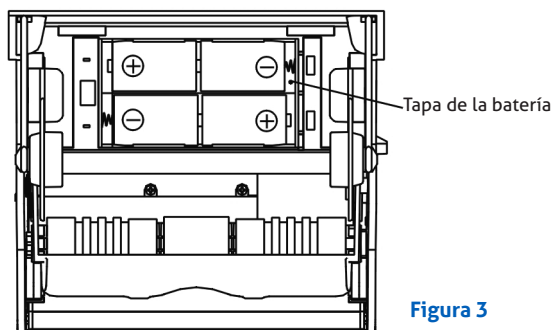


Figura 3



INSTALACIÓN DEL ROLLO DE PAPEL

Siga el paso 1 y 2 para instalar el rollo de papel.

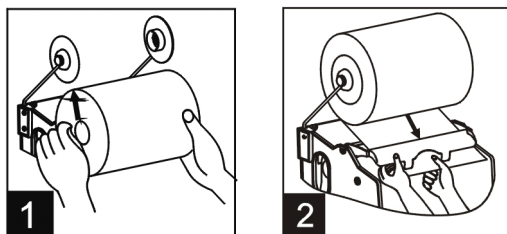


1. Tire ligeramente de las ruedas del soporte de papel de ambos lados y coloque un nuevo rollo de papel toalla.
2. Una mano levanta la barra de transferencia, la otra tira el papel entre la barra de transferencia y la rueda de goma (la distancia desde el margen del papel a la rueda de goma es de aproximadamente 30 mm), baje la barra de transferencia y cierre la tapa.

Cuando el diámetro del rollo sea <10 mm, siga los pasos 3 y 4 para cambiar un rollo nuevo

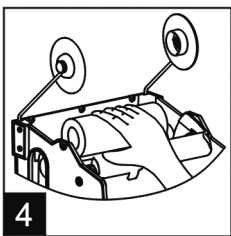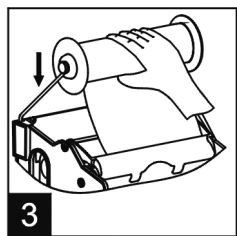

- 3. Retire el rollo restante de las ruedas del soporte del papel.
- 4. Tire del rollo restante entre los soportes del rollo. Luego, siga los pasos 1 y 2 para instalar un nuevo rollo de toalla de papel.

REGULACIÓN DE LONGITUD

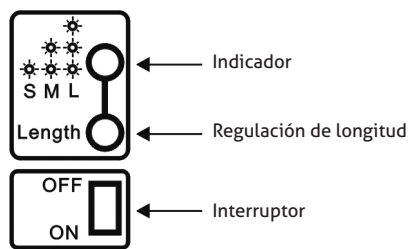

Encienda la alimentación, use el botón "Regulación de longitud" para ajustar, hay 3 tipos de longitud que se pueden elegir. Cada vez que presiona el botón, muestra una longitud diferente de diferentes maneras. Como sigue:

Longitud de dispensación	Estado del indicador
200 mm (7 7/8 ") - S	Parpadea una vez
250 mm (9 7/8 ") - M	Parpadea dos veces de forma continua
300 mm (11 7/8 ") - L	Parpadea tres veces de forma continua

- Notas:**
- 1. El indicador sigue encendido cuando el sensor ha sido cubierto por papel o cosas no transparentes. Esto debería eliminarse.
 - 2. Cuando la energía de las baterías está en diferentes condiciones, la longitud de la toalla de papel dispensada será un poco diferente.

USO

- 1. Después de terminar la instalación, encienda la unidad y el dispensador automático funcionará.
- 2. El dispensador dispensará automáticamente cuando las manos se coloquen 8 ± 1 cm más cerca del sensor. Al retirar las manos, el dosificador dejará de funcionar. Hay un intervalo de 1 segundo después de una dispensación.
- 3. Tire la toalla de papel de izquierda a derecha según el símbolo de la carcasa.

MAL FUNCIONAMIENTO

Si el dispensador no funciona normalmente, verifique:

1. Si las baterías están instaladas correctamente y si tienen suficiente carga.
2. Si hay algo bloqueando la salida del papel después de una dispensación.
3. Si el rollo gira libremente.

Si el dispensador aún no funciona después de verificar las 3 situaciones anteriores, comuníquese con nuestra compañía o los distribuidores, o busque un electricista calificado.

ESPECIFICACIÓN

- Transformador DC: Entrada AC110-120V / 220-240V Salida DC 6V > 3VA
- Batería: DC 4 x 1,5 V R20S
- Distancia de detección: 8 ± 1 cm
- Longitud de entrega del papel: 200 mm, 250 mm, 300 mm (7 7/8", 9 7/8", 11 7/8")
- Dimensión de la toalla en rollo aceptada: ancho <195 mm-200 mm (7 5/8" - 7 7/8"), diámetro 200 mm (7 7/8").

PAQUETE


- Un dispensador.
- Una copia del manual de usuario.
- Un paquete de 4 tacos de $\varnothing 6$ mm, 4 tornillos de 4 x 25, 2 llaves.

Thank you for purchasing this auto roll towel dispenser. Made of 304 stainless steel with brushed finish, controlled by an intelligent PCB with infrared sensor. It is steady, sensitive, and saves power. It is an ideal choice for public places.

FEATURES

- With stainless steel cover, it is durable, steady, and easy to clean.
- With infrared sensor, dispense paper towel automatically.
- Without hand touch it prevents cross infection.
- 1 second between every dispense, avoiding wasting the paper towel.
- Adjustable length dispensed with 200mm, 250mm, and 300mm.
- Accepts roll with 195-200mm wide and 200mm diameter.
- Reload a new roll automatically when finished one roll. This avoids wasting partial roll and lack of paper towel.

COMPONENTS

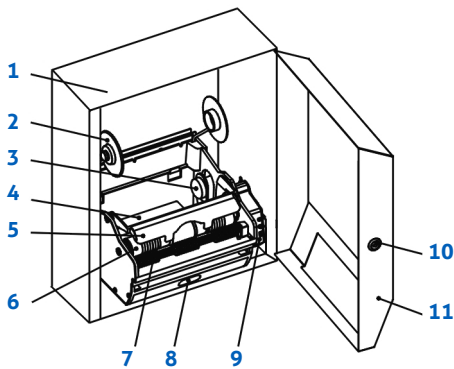

- 1. Base
- 2. Top paper holder wheel
- 3. Bottom paper holder
- 4. Battery cover
- 5. Transfer bar
- 6. Rubber wheel
- 7. Small wheel
- 8. Sensor
- 9. Switch
- 10. Cover
- 11. Lock

INSTALLATION

Unlock the cover with the key, drill 4 holes of 6mm diameter as shown in Figure2 and fix the dispenser on the wall with plugs and screws attached.

Note: Do not install the dispenser at the place which is with direct sunlight or above the staff with strong reflection.

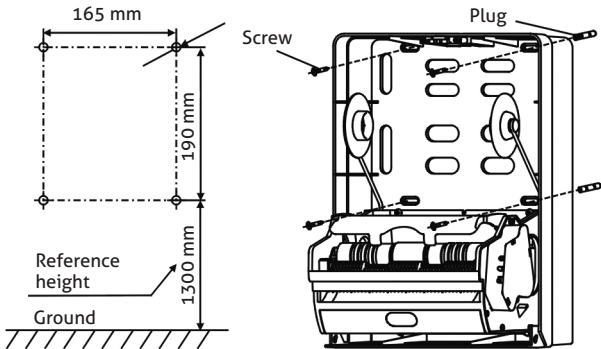


Figure 2

BATTERY INSTALLATION

1. Open the cover of the battery box and put 4 x LR20 batteries correctly according to "+" "-", and pull back the cover.
2. If there is a roll of paper towel in the dispenser, remove it before install the batteries.

DC Power supply (not included)

This dispenser introduces automatic power supply switch mode.

When DC transformer works, batteries do not. While DC transformer stops working, batteries start to work automatically.

Please make sure DC transformer is well connected with appliance receptacle (see Figure 3).

Notes:

1. *The dispenser will not work if install the batteries improperly.*
2. *To avoid breaking the dispenser, do not mix different kind of batteries to use.*
3. *When the dispenser is low battery, the indicator will flash one time per second. The dispenser can still work but should replace the batteries. When the indicator flashes twice per second, it will stop working, must replace the batteries.*



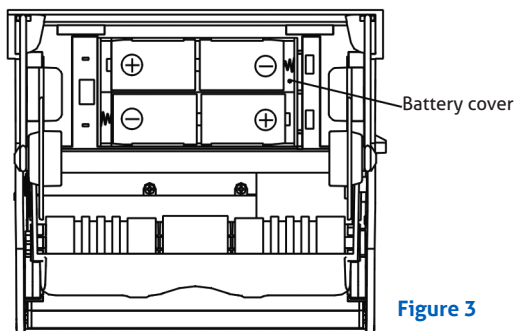


Figure 3



INSTALLATION OF ROLL PAPER TOWEL

Follow Step 1 and 2 to install the roll paper towel.

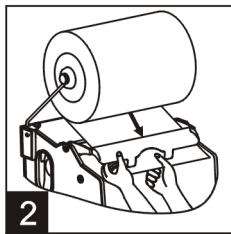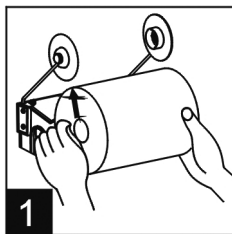


1. Pull the paper holder wheels from both sides slightly and pull a new roll of paper towel into it.
2. On hand lifts the transfer bar, the other one pulls the paper towel out between the transfer bar and the rubber wheel (the distance from paper margin to rubber wheel is about 30mm), pull down the transfer bar and close the cover.

When the diameter of roll is <10mm, follow the step 3 and 4 to change a new roll

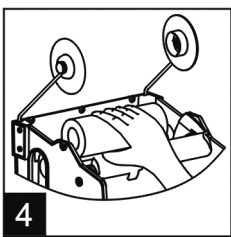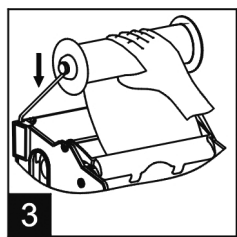

- 3. Remove the remaining roll from the paper holder wheels
- 4. Pull the remaining roll between the roll holders. Then follow Step 1 and 2 to install a new roll of paper towel.

LENGTH REGULATION

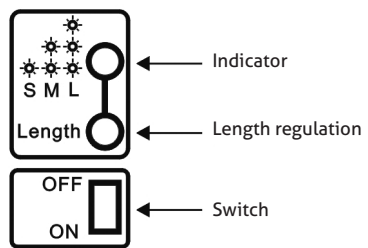

Switch on the power, use the "Length Regulation" button to adjust, there are 3 kinds of length can be choose. Every time press the button, shows different length in different ways. As follows:

Dispense length	State of indicator
200 mm (7 7/8 ") - S	Flash one time
250 mm (9 7/8 ") - M	Flash two times continuously
300 mm (11 7/8 ") - L	Flash three times continuously

- Notes:
- 1. The indicator keeps on lighting when the sensor has been covered by paper or not transparent things. This should be removed.
 - 2. When the batteries power is in different condition, the length of paper towel dispensed will be a little bit different.

APPLICATION

- 1. Alter finish the installation, switch on the power, and the auto paper towel dispenser will work.
- 2. The dispenser will dispense paper towel automatically when hands are placed 8 ± 1 cm closer to the sensor. When remove the hands, the dispenser will stop working. There is 1 second interval alter a dispensation.
- 3. Toss the paper towel from left or right according the symbol on the casing.

MALFUNCTION

If the roll towel dispenser does not work normally, please check:

1. If the batteries are installed correctly, and if the batteries have enough power.
2. If there is something blocking the paper towel outlet.
3. If the roll is turning freely.

If the dispenser is still not working after checking the 3 situations above, please contact our company or the dealers, or find a qualified electrician.

SPECIFICATION

- DC Transformer: Input AC110-120V / 220-240V Output DC 6V > 3VA
- Battery: DC 4 x 1.5V R20S
- Sensing distance: 8 ± 1 cm
- Paper delivering length: 200mm, 250mm, 300mm (7 7/8", 9 7/8", 11 7/8")
- Accepted roll towel dimension: width < 195mm-200mm (7 5/8"-7 7/8"), diameter 200mm (7 7/8").

PACKAGE

- One set of roll towel dispenser.
- One copy of user manual.
- One pack of 4pcs of $\varnothing$ 6mm plugs, 4pcs of 4 x 25 self - thread screws, 2pcs of keys.



Av. Joan Carles I, 46-48
08908 L'Hospitalet de Llobregat - Barcelona - (SPAIN)
www.genwec.com

